

# SLICER CLEANING SAFETY

## Before Cleaning Blade:

- ✓ **Unplug** the machine and set the blade adjustment to zero.
- ✓ Read and follow manufacturer's cleaning and maintenance instructions.



## When Cleaning Blade:

- ✓ **CAREFULLY** wash both sides of the blade by wiping outward from the center of the blade.
  - A spoon with a cloth wrapped around one end can be used to clean the blade, working from the center to the outside.
  - Wear metal mesh or Kevlar gloves when cleaning the blade.
- ✓ Before plugging back into the outlet, make sure the switch is in the “off” position.